

# How to Reset and Connect WiFi on Epson WiFi Printer

## TechRounder PDF Edition

Live article: <https://www.techrounder.com/tips/how-to-reset-and-connect-wifi-on-epson-wifi-printer/>

---

By Vipin PG | Published November 3, 2022 | Updated March 8, 2026 | Format: Guide | 2 min read

## Quick answer

To reset WiFi on an Epson printer, turn it off, then hold the power and network buttons together until the WiFi and WiFi Direct indicators flash and eventually stop. To reconnect, press and hold the WiFi button for 5 seconds until the indicators flash, then press the WPS button on your router to pair the devices.

Printing has never been easier with modern WiFi-enabled devices that allow seamless operation and control from anywhere. Whether it's from a smartphone, tablet, or laptop, users can enjoy hassle-free printing with enhanced convenience and efficiency. This level of flexibility is also a key feature of the advanced Epson LabelWorks printers.

Suppose you already configured the Epson WiFi printer using the WiFi network and wish to change the same at any later stage. In that case, this article will help you to reset and connect the Epson WiFi Printer to the WiFi network.

These steps include two parts. First, reset the WiFi configuration on the Epson Printers like L3151, L3150, L4150, etc., then need to configure it again with the WiFi network.

## How to Reset WiFi on Epson WiFi Printer

To reset the WiFi configuration on the Epson WiFi printer, follow the below steps.

Step 1: Turn off the printer first.

Step 2: Hold the power and Network buttons together until the WiFi and WiFi Direct Indicator starts flashing.

Step 3: Once the LED indicators start flashing, you can release the button.

Step 4: It will take 1 minute, and the indicator will continue flashing. Once the reset is completed, the indicator will stop flashing, and you will see no lights on the WiFi and WiFi Direct indicators.

Now, the WiFi configuration on the Epson printer has been reset, and you can continue configuring the WiFi setup.

## How to Configure WiFi on Epson Printer?

Once resetting, proceed with the WiFi configuration on the Epson WiFi Printer. To do so, follow the steps.

Step 1: Ensure the Epson Printer is turned on.

Step 2: Press and hold the WiFi button on the printer for 5 seconds. Now the WiFi and WiFi Direct indicator will start flashing alternatively.

Step 3: Now, go to your WiFi router and press the WPS button to accept the connection request from the WiFi Printer.

This process will take a few minutes, and you will see the indicator flashing throughout, and in the background, the connection between the WiFi router and the printer is established.

Step 4: After that, the indicator will stop flashing as it finalizes the connection. Don't touch any button and keep waiting for a few more seconds.

Finally, the WiFi indicator (1st indicator) will come and will keep glowing. Done; the WiFi connection is now established successfully.

Now, you can start printing on the Epson WiFi printer from any connected device within the same Network.

## References

1. omegabrand.com - epson-labelworks-printers - <https://www.omegabrand.com/epson-labelworks-printers/>